

[WWW.RALLY-RAIDPRODUCTS.CO.UK](http://WWW.RALLY-RAIDPRODUCTS.CO.UK)




**RALLY  
RAID**  
**PRODUCTS.CO.UK**



# **AIR FILTER FITTING MANUAL**



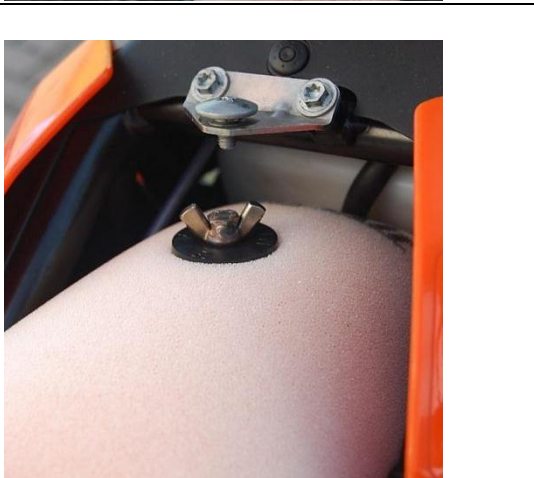


[WWW.RALLY-RAIDPRODUCTS.CO.UK](http://WWW.RALLY-RAIDPRODUCTS.CO.UK)

## Air Filter Kit Fitting Instructions

|  |  |
|--|--|
| <p>1. Remove seat from motorcycle.</p>   |    |
| <p>2. Remove 2 screws securing snorkel to air box, remove paper air filter and wipe clean sealing surface of air box.</p>  |   |
| <p>3. Unscrew centre bolt from air filter kit and remove lower plate.</p>  |  |
| <p>4. Apply a bead of silicon sealant on to the air box sealing surface and insert lower plate into front two slots of the air box and secure with standard screws at the rear. NOTE – Ensure there is a continuous bead of sealant all around the seal between the lower plate and air box.</p> |  |

|   |  |
|---|--|
|   |    |
| <p>5. Remove excess sealant and allow to cure for 24 hrs.</p>   |  |
| <p>6. Air filter supplied are NOT oiled, and therefore needs to be treated before use.</p>                              |  |
| <p>7. Fit air filter element onto upper fame ensuring tube is fully inserted into plastic centre of the air filter.</p> |  |
| <p>8. Grease sealing face of filter.</p>  |  |

|  |  |
|--|--|
|  |    |
| <p>9. Put M6 screw into filter and fit filter with frame, onto lower frame, ensuring raised tag on lower frame fits into slot in the upper .</p> |   |
| <p>10. Locate screw in the threaded hole and tighten</p>   |  |
| <p>11. Check sealing face of filter is fitted correctly all round outside of the filter.</p>   |  |
| <p>12. Replace seat.</p>   |  |