

[WWW.RALLY-RAIDPRODUCTS.CO.UK](http://WWW.RALLY-RAIDPRODUCTS.CO.UK)



# **FITTING INSTRUCTIONS**

**REPLACEMENT STEERING LOCK PIN  
(EVO1, EVO2 AND SAFARI FAIRING KITS AND RRP 020)**



[WWW.RALLY-RAIDPRODUCTS.CO.UK](http://WWW.RALLY-RAIDPRODUCTS.CO.UK)

## Fitting Instructions for replacement steering lock pin


EVO1, EVO2 Adventure, Rally and Safari Fairing Kits ( to allow the steering lock to be employed)

Also RRP 020 Steering Damper Kit

1. Remove Ignition Barrel from frame; ensure key is in "OFF" position.



2. Remove Plastic housing.

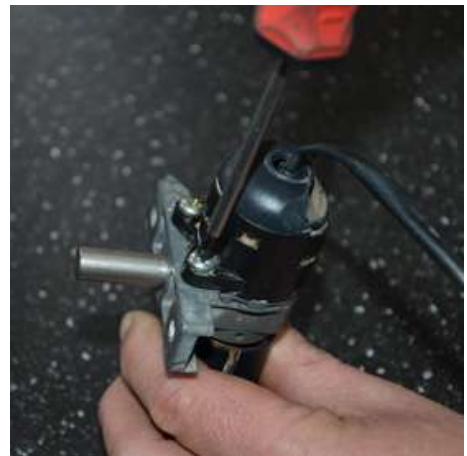

3. Remove 2 screws that attach electrical housing to barrel.



4. Prise apart lower plate from barrel body using flat screwdriver in slots.



5. Once lower plate is removed turn key to "PUSH" position so that arm lines up with slot in pin holder.



6. Using long-nosed pliers, remove pin holder body, then remove old pin and insert new longer pin.







7. Replace pin holder body then re-fit lower plate, lining up slots.



8. Turn key to "OFF" position then re-fit switch housing and both screws.



9. Check correct operation of key in barrel.

NB. It is advisable to put some grease in to pin mechanism before replacing lower plate.